




© Copyright 2000. Black Box Corporation. All rights reserved.

1000 Park Drive • Lawrence, PA 15055-1018 • 724-746-5500 • Fax 724-746-0746



T1 12-Port Access Multiplexor Module

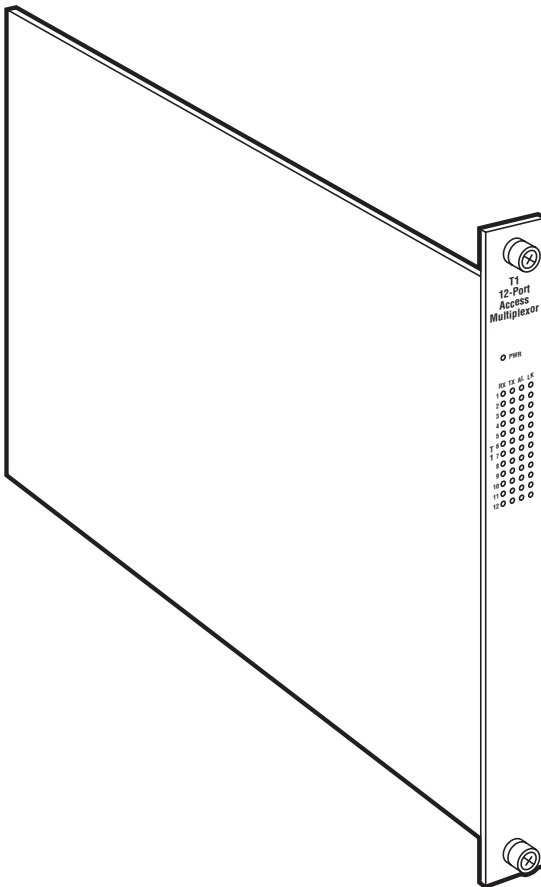

**CUSTOMER
SUPPORT
INFORMATION**

Order **toll-free** in the U.S.: Call **877-877-BBOX** (outside U.S. call **724-746-5500**)
FREE technical support 24 hours a day, 7 days a week: Call **724-746-5500** or fax **724-746-0746**
Mailing address: **Black Box Corporation**, 1000 Park Drive, Lawrence, PA 15055-1018
Web site: www.blackbox.com • E-mail: info@blackbox.com

**FEDERAL COMMUNICATIONS COMMISSION
AND
INDUSTRY CANADA
RADIO FREQUENCY INTERFERENCE STATEMENTS**

This equipment generates, uses, and can radiate radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio communication. It has been tested and found to comply with the limits for a Class A computing device in accordance with the specifications in Subpart J of Part 15 of FCC rules, which are designed to provide reasonable protection against such interference when the equipment is operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference, in which case the user at his own expense will be required to take whatever measures may be necessary to correct the interference.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This digital apparatus does not exceed the Class A limits for radio noise emission from digital apparatus set out in the Radio Interference Regulation of Industry Canada.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Règlement sur le brouillage radioélectrique publié par Industrie Canada.

NORMAS OFICIALES MEXICANAS (NOM) ELECTRICAL SAFETY STATEMENT

INSTRUCCIONES DE SEGURIDAD

1. Todas las instrucciones de seguridad y operación deberán ser leídas antes de que el aparato eléctrico sea operado.
2. Las instrucciones de seguridad y operación deberán ser guardadas para referencia futura.
3. Todas las advertencias en el aparato eléctrico y en sus instrucciones de operación deben ser respetadas.
4. Todas las instrucciones de operación y uso deben ser seguidas.
5. El aparato eléctrico no deberá ser usado cerca del agua—por ejemplo, cerca de la tina de baño, lavabo, sótano mojado o cerca de una alberca, etc..
6. El aparato eléctrico debe ser usado únicamente con carritos o pedestales que sean recomendados por el fabricante.
7. El aparato eléctrico debe ser montado a la pared o al techo sólo como sea recomendado por el fabricante.
8. Servicio—El usuario no debe intentar dar servicio al equipo eléctrico más allá a lo descrito en las instrucciones de operación. Todo otro servicio deberá ser referido a personal de servicio calificado.
9. El aparato eléctrico debe ser situado de tal manera que su posición no interfiera su uso. La colocación del aparato eléctrico sobre una cama, sofá, alfombra o superficie similar puede bloquea la ventilación, no se debe colocar en libreros o gabinetes que impidan el flujo de aire por los orificios de ventilación.
10. El equipo eléctrico deber ser situado fuera del alcance de fuentes de calor como radiadores, registros de calor, estufas u otros aparatos (incluyendo amplificadores) que producen calor.
11. El aparato eléctrico deberá ser conectado a una fuente de poder sólo del tipo descrito en el instructivo de operación, o como se indique en el aparato.

12. Precaución debe ser tomada de tal manera que la tierra física y la polarización del equipo no sea eliminada.
13. Los cables de la fuente de poder deben ser guiados de tal manera que no sean pisados ni pellizcados por objetos colocados sobre o contra ellos, poniendo particular atención a los contactos y receptáculos donde salen del aparato.
14. El equipo eléctrico debe ser limpiado únicamente de acuerdo a las recomendaciones del fabricante.
15. En caso de existir, una antena externa deberá ser localizada lejos de las líneas de energía.
16. El cable de corriente deberá ser desconectado del cuando el equipo no sea usado por un largo periodo de tiempo.
17. Cuidado debe ser tomado de tal manera que objetos líquidos no sean derramados sobre la cubierta u orificios de ventilación.
18. Servicio por personal calificado deberá ser provisto cuando:
 - A: El cable de poder o el contacto ha sido dañado; u
 - B: Objetos han caído o líquido ha sido derramado dentro del aparato; o
 - C: El aparato ha sido expuesto a la lluvia; o
 - D: El aparato parece no operar normalmente o muestra un cambio en su desempeño; o
 - E: El aparato ha sido tirado o su cubierta ha sido dañada.

TRADEMARKS USED IN THIS MANUAL

Any trademarks mentioned in this manual are acknowledged to be the property of the trademark owners.

1. Introduction

The T1 12-Port Access Multiplexor Module (LRA1208C) is a 12-port T1 access multiplexor module for the 2 x 12 or 1 x 4 slot DSLAM Chassis. The module attaches to each Uplink Interface Module via a 10/100-Mbps Ethernet connection on the backplane. Each T1 port translates the outgoing Ethernet frame to T1 via media conversion. This is a Layer 1 copper pair to an LRA1200A-T. Received WAN frames are converted back to Ethernet and forwarded to the appropriate backplane port. No routing or translational bridging is done internally.

The connection across the T1 line may be a fractional or full T1. Speed is hardware- or software-selectable per port (software overrides hardware settings) and determined by the Module. T1 technology is intended for use from the telephone company central office across the local loop to the home or business. It may also be used to transport data between locations over T1 lines.

2. Installation

2.1 Bandwidth Selection

The T1 Module provides 8 bandwidth options for the T1 link, as mentioned above. Two switch banks (12 switches per bank) located on the circuit board are used to select the default bandwidth. The switches affect the operation of the T1 connection only. These switches are paired in groups of two, with each group affecting a single T1 port. Table 2-1 depicts switch/port associations.

Table 2-1. Upper and Middle Switch Bank Switches

Upper		Middle	
1-2	Port 1	1-2	Port 7
3-4	Port 2	3-4	Port 8
5-6	Port 3	5-6	Port 9
7-8	Port 4	7-8	Port 10
9-10	Port 5	9-10	Port 11
11-12	Port 6	11-12	Port 12

Table 2-2 indicates the switch settings used to determine the default speed setting per port. When operating a port as a fractional T1 line, the equipment requires contiguous timeslots.

Table 2-2. Switch Settings

Switch #1	Switch #2	Timeslots	Bandwidth
ON	ON	1-24	1.536 Mbps
OFF	ON	1-18	1.152 Mbps
ON	OFF	1-12	768 kbps
OFF	OFF	1-6	384 kbps

In addition, a third (lower) switch bank is provided to select the following for all of the T1 lines.

Table 2-3. Lower Switch Bank Settings.

Switch	ON			OFF	
1 (Framing) 2 (Line Coding) 5 (Timing) 6 (Not Used)	Extender Super Frame B8ZS Local			Super Frame AMI Loop	
Switch	0 dB	-7.5 dB	-15 dB	-22.5 dB	
3 (Line Buildout) 4 (Line Buildout)	ON ON	OFF ON	ON OFF	OFF OFF	

The Module ships with all switches in the ON position. Each port will run at 1.536 Mbps, ESF framing, B8ZS line coding, local timing, and 0 dB transmit attenuation by default.

NOTE

Speed settings made via the web management system override the hardware settings.

2.2 Port Pinout

The T1 RJ-21 has the following pinout.

Table 2-4. T1 RJ-21 Pinout

Port	Pin		Pin	
1	26	RxT	39	TxT
	1	RxR	14	TxR
2	27	RxT	40	TxT
	2	RxR	15	TxR
3	28	RxT	41	TxT
	3	RxR	16	TxR
4	29	RxT	42	TxT
	4	RxR	17	TxR
5	30	RxT	43	TxT
	5	RxR	18	TxR
6	31	RxT	44	TxT
	6	RxR	19	TxR
7	32	RxT	45	TxT
	7	RxR	20	TxR
8	33	RxT	46	TxT
	8	RxR	21	TxR
9	34	RxT	47	TxT
	9	RxR	22	TxR
10	35	RxT	48	TxT
	10	RxR	23	TxR
11	36	RxT	49	TxT
	11	RxR	24	TxR
12	37	RxT	50	TxT
	12	RxR	25	TxR

2.3 LED Indicators

Each T1 port features the following status LEDs for at-a-glance monitoring.

- **PWR:** Steady green indicates normal operation.
- **LK:** Pulsing green (once per second) indicates that the T1 connection is operational and the unit is receiving either valid data packets or status packets from the remote unit on the other side of the T1 connection.

Solid green indicates link (frame synchronization), but no traffic is being received.

No green indicates a red alarm (carrier failure alarm).

- **RX:** Flashing amber indicates data receive from the T1 line.
- **TX:** Flashing amber indicates data transmit to the T1 line.
- **AL:** Solid amber indicates a yellow alarm (carrier failure alarm).

Flashing amber indicates a blue alarm (carrier failure alarm).

2.4 Version 3.02.01 Feature Enhancements

Specific feature enhancements for this module are detailed in the IPD management section of the manual for the IP DSLAM.