




Video Stereo Audio Baluns

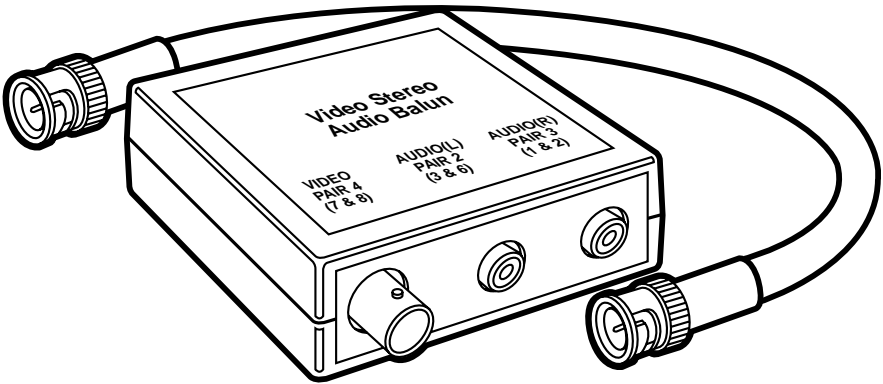

**CUSTOMER
SUPPORT
INFORMATION**

Order toll-free in the U.S.: Call **877-877-BBOX** (outside U.S. call **724-746-5500**)
FREE technical support 24 hours a day, 7 days a week: Call **724-746-5500** or fax **724-746-0746**
Mailing address: **Black Box Corporation**, 1000 Park Drive, Lawrence, PA 15055-1018
Web site: www.blackbox.com • E-mail: info@blackbox.com

**FEDERAL COMMUNICATIONS COMMISSION AND INDUSTRY CANADA
RADIO-FREQUENCY INTERFERENCE STATEMENTS**

Class B Digital Device. This equipment has been tested and found to comply with the limits for a Class B computing device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or telephone reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an experienced radio/TV technician for help.


Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

To meet FCC requirements, shielded cables are required to connect this device to other Class B certified devices.

This digital apparatus does not exceed the Class B limits for radio noise emission from digital apparatus set out in the Radio Interference Regulation of Industry Canada.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de classe B prescrites dans le Règlement sur le brouillage radioélectrique publié par Industrie Canada.

TRADEMARKS USED IN THIS MANUAL

BLACK BOX and the  logo are registered trademarks of Black Box Corporation.

VELCRO® is a registered trademark of Velcro USA Inc.

Any other trademarks mentioned in this manual are acknowledged to be the property of the trademark owners.

**NORMAS OFICIALES MEXICANAS (NOM)
ELECTRICAL SAFETY STATEMENT**

INSTRUCCIONES DE SEGURIDAD

1. Todas las instrucciones de seguridad y operación deberán ser leídas antes de que el aparato eléctrico sea operado.
2. Las instrucciones de seguridad y operación deberán ser guardadas para referencia futura.
3. Todas las advertencias en el aparato eléctrico y en sus instrucciones de operación deben ser respetadas.
4. Todas las instrucciones de operación y uso deben ser seguidas.
5. El aparato eléctrico no deberá ser usado cerca del agua—por ejemplo, cerca de la tina de baño, lavabo, sótano mojado o cerca de una alberca, etc..
6. El aparato eléctrico debe ser usado únicamente con carritos o pedestales que sean recomendados por el fabricante.
7. El aparato eléctrico debe ser montado a la pared o al techo sólo como sea recomendado por el fabricante.
8. Servicio—El usuario no debe intentar dar servicio al equipo eléctrico más allá a lo descrito en las instrucciones de operación. Todo otro servicio deberá ser referido a personal de servicio calificado.
9. El aparato eléctrico debe ser situado de tal manera que su posición no interfiera su uso. La colocación del aparato eléctrico sobre una cama, sofá, alfombra o superficie similar puede bloquea la ventilación, no se debe colocar en libreros o gabinetes que impidan el flujo de aire por los orificios de ventilación.
10. El equipo eléctrico deber ser situado fuera del alcance de fuentes de calor como radiadores, registros de calor, estufas u otros aparatos (incluyendo amplificadores) que producen calor.
11. El aparato eléctrico deberá ser conectado a una fuente de poder sólo del tipo descrito en el instructivo de operación, o como se indique en el aparato.

12. Precaución debe ser tomada de tal manera que la tierra física y la polarización del equipo no sea eliminada.
13. Los cables de la fuente de poder deben ser guiados de tal manera que no sean pisados ni pellizcados por objetos colocados sobre o contra ellos, poniendo particular atención a los contactos y receptáculos donde salen del aparato.
14. El equipo eléctrico debe ser limpiado únicamente de acuerdo a las recomendaciones del fabricante.
15. En caso de existir, una antena externa deberá ser localizada lejos de las líneas de energía.
16. El cable de corriente deberá ser desconectado del cuando el equipo no sea usado por un largo periodo de tiempo.
17. Cuidado debe ser tomado de tal manera que objetos líquidos no sean derramados sobre la cubierta u orificios de ventilación.
18. Servicio por personal calificado deberá ser provisto cuando:
 - A: El cable de poder o el contacto ha sido dañado; u
 - B: Objetos han caído o líquido ha sido derramado dentro del aparato; o
 - C: El aparato ha sido expuesto a la lluvia; o
 - D: El aparato parece no operar normalmente o muestra un cambio en su desempeño; o
 - E: El aparato ha sido tirado o su cubierta ha sido dañada.

Contents

Chapter	Page
1. Specifications	5
2. Introduction	7
3. Installation	8
4. Troubleshooting	10
4.1 Things to Try If Problems Occur	10
4.2 Calling Black Box	11
4.3 Shipping and Packaging	11

1. Specifications

Cable Required:	<p>Between Balun pairs: Unshielded twisted pair (UTP): Construction Standard: Category 3 or higher; Gauge: 24 AWG or lower; Termination: RJ-45 plugs; Pairs: 3 or more (6 wires used) to carry all video and audio channels; Impedance: 100 ohms at 1 MHz; Maximum Capacitance: 20 pF/ft. (6.1 pF/m); Maximum Attenuation: 6.6 dB/1000 ft. (2 dB/km);</p> <p>To attached devices: Video: (1) Standard 75-ohm RG59/U coaxial cable with a BNC male connector on the Balun end, preferably the cable supplied with the Balun; Audio: (2) Standard RCA phono cables</p>
Compliance:	FCC Class B, IC Class/classe B; CISPR Pub. 22 Class B
Standard:	Composite (baseband) video: NTSC, PAL, or SECAM
Impedance:	Coaxial side: 75 ohms; Phono side: 600 ohms; UTP side: 100 ohms
Bandwidth:	Video: DC to 8 MHz; Audio: 20 Hz to 50 kHz
Maximum RF Input:	1.1 volts at 60 Hz
Insertion Loss:	Less than 2 dB over the DC-to-8-MHz frequency range
Return Loss:	Greater than 15 dB over the DC-to-8-MHz frequency range
Common-Mode Rejection:	Greater than 40 dB at 8 MHz

VIDEO STEREO AUDIO BALUNS

Maximum

Distance: With Category 3 cable: 1200 ft. (365.8 m) for color video,
1500 ft. (457.2 m) for black & white video;
With Category 5 cable: 2200 ft. (670.6 m) for color video,
2500 ft. (762 m) for black & white video

Connectors: (1) RJ-45 female, (1) BNC female, and (2) RCA female

RJ-45 Pins Used: Pins 1 (audio right), 2 (audio right ground), 3 (audio left),
6 (audio left ground), 7 (video), 8 (video ground)

Temperature

Tolerance: Operating: 32 to 131°F (0 to 55°C);
Storage: -4 to +185°F (-20 to +85°C)

Humidity

Tolerance: Up to 95% noncondensing

Enclosure: Fire-retardant plastic with included optional VELCRO®
mounting material

Size: 2.3"H x 2.4"W x 1"D (5.8 x 6.1 x 2.5 cm)

Weight: With included cable: 4 oz. (113 g);
Without included cable: 2.8 oz. (79 g)

2. Introduction

With the Video Stereo Audio Balun, you can transmit composite baseband video and audio signals across Category 3 or better unshielded twisted-pair (UTP) cable, which is already wired into most commercial sites. Use pairs of Baluns to transmit standard NTSC, PAL, or SECAM composite video with stereo audio: The Balun near the media source takes a single composite baseband video signal from 75-ohm coaxial cable, as well as left and right audio signals from two 600-ohm phono cables, converts the signals, and transmits them over UTP cable to the other Balun, which converts them back and sends them to their destination.

Connect the Video Stereo Audio Balun to a site's structured cabling through a modular wall jack in the work area. Each Balun has a BNC connector and two RCA connectors at one end and an RJ-45 jack at the other end.

The Video Stereo Audio Balun is designed for use with CCTV cameras and monitors, video-cassette recorders (NTSC, PAL, or SECAM), videoconferencing, and other baseband audiovisual equipment. Applications include: security/surveillance monitoring, video bulletin boards, financial information services, news services, education, video training, airport displays, video capture, and informational displays in stock exchanges, hotels, and convention centers.

3. Installation

To install a pair of Video Stereo Audio Baluns, take these steps:

CAUTION!

Do not attempt to open the housing. There are no user-serviceable parts inside the Video Stereo Audio Balun. Opening the unit will void your warranty.

1. Make sure that the video-destination device is not too far away from the media-source device(s) (refer to the **Maximum Distance** specification in **Chapter 1**). If the destination device is beyond the reach of the source Balun, the signals the device receives will be weak or nonexistent.
2. Follow the manufacturer's instructions for turning off power to the video and audio equipment you will be attaching, and disconnecting that equipment from AC power and from all other devices.
3. Make certain that the telecommunications outlets and cross-connects to which you will connect the Baluns are configured properly and are labeled so that the circuit can be identified.

CAUTION!

Do not connect the Video Stereo Audio Balun to a telecommunication outlet wired to unrelated equipment. Making such a connection may damage the equipment and/or the Balun. Make sure that all wiring is straight-through-pinned.

4. Verify that the twisted-pair circuit you want to use is not already being used for other LAN or telephone equipment.
5. *Optional:* Each Balun comes with VELCRO® mounting pads. To mount a Balun to a surface, first make sure that that surface is free of dust, oil, etc., so the VELCRO will adhere to it. Then peel off the adhesive backing, attach one side of the pads to the Balun, and attach the other side to the surface.

CAUTION!

Do not mount the Balun over equipment-ventilation openings. Doing so might damage the Balun or cause the equipment to overheat.

6. For each Balun—depending on what type of video equipment you are attaching it to—plug its BNC female connector either directly into the device's BNC male connector, or into the BNC male connector of a cable that runs to the device, such as the cable included with the Balun. You can also run phono cables from your audio source(s) and plug them into the Balun's

RCA phono jacks; you can use one or both of the audio channels, as appropriate for your application. Refer to Figure 3-1.

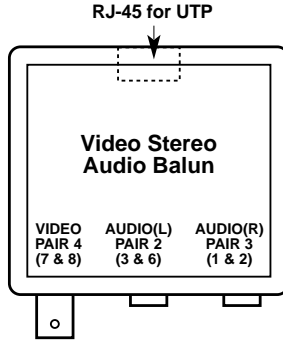


Figure 3-1. The Balun and its connectors.

7. Connect one end of a UTP cable into each Balun's RJ-45 modular jack. To carry the video signal, these cables must carry a wire pair pinned to RJ-45 Pins 7 and 8. To carry the left audio signal, the cables must carry a pair pinned to Pins 3 and 6. To carry the right audio signal, the cables must carry a pair pinned to Pins 1 and 2.
8. Plug the other end of each UTP cable into the appropriate video wall outlet or patch panel. When this is done, a complete cabling circuit should run between the two baluns, as shown in Figure 3-2.

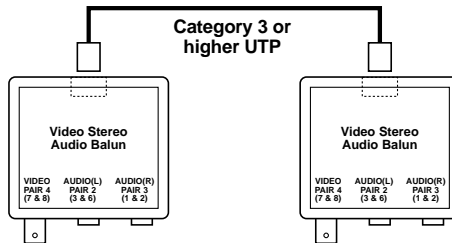


Figure 3-2. Two Baluns cabled together.

9. Reconnect and power up the video and audio equipment.

Your Video Stereo Audio Balun system should be ready for continuous operation.

4. Troubleshooting

4.1 Things to Try If Problems Occur

If at any time your Video Stereo Audio Balun system does not seem to be working properly, take these steps:

1. Following the manufacturer's instructions, perform diagnostics on your video and/or audio equipment.
2. If this doesn't solve the problem, check all cable connections and the integrity of your site wiring.
3. You might be trying to transmit the audio/video signals across too great a length of cable. The maximum distance over which the Baluns can transmit and receive video signals depends on your cable and your video and audio equipment; refer to the **Maximum Distance** specification in **Chapter 1**.
4. Make sure that the patch cord you are running between the Balun and your site's wiring system is the correct cable type and is properly pinned (see the **Cable Required** specification in **Chapter 1**).
5. If possible, replace the Video Stereo Audio Baluns involved in the problem with Video Stereo Audio Baluns that are known to be working, one at a time. If at any point the problem goes away, there is probably a defect in the Balun you just replaced.
6. If you still cannot diagnose the problem, call Black Box for technical support as described in the next section.

4.2 Calling Black Box

If you determine that a Video Stereo Audio Balun is malfunctioning, *do not attempt to alter or repair the unit*. It contains no user-serviceable parts. Contact Black Box Technical Support at 724-746-5500.

Before you do, make a record of the history of the problem. We will be able to provide more efficient and accurate assistance if you have a complete description, including:

- the nature and duration of the problem;
- when the problem occurs;
- the components involved in the problem;
- any particular application that, when used, appears to create the problem or make it worse; and
- the results of any testing you've already done.

4.3 Shipping and Packaging

If you need to transport or ship your Video Stereo Audio Balun:

- Package it carefully. We recommend that you use the original container.
- If you ever ship the Balun back to us for any reason, contact Black Box to get a Return Authorization (RA) number.



Doc. No. 94000128A

© Copyright 2002. Black Box Corporation. All rights reserved.

1000 Park Drive • Lawrence, PA 15055-1018 • 724-746-5500 • Fax 724-746-0746